

## DEFAULT OPERATOR PASSWORDS

---

Default passwords for first-time OPERATOR log-in.

SOFTWARE	PASSWORD
FUNKY	54463
VAULT	99999
EL GALLO	1234
5PAK	11111
PRINSYS	11111
PRINSYS 2	9999
PROGRESSIVE SERVER	NULL

**TO SET JACKPOTS ON THE PROGRESSIVE SERVER...**

SOFTWARE	PASSWORD
NUDGE/365	WORK
CHARGER	CLAY
ALL OTHER GAMES	PLAY

**NOTE:** *If you decide to change the default password, make sure you remember the password. A replacement drive will have to be ordered.*