

Genmega Gemini-D Scanner Replacements

How to Replace Gemini-D Scanner

1. Power down the Kiosk, open it and locate the barcode scanner on the right side.
2. Gently remove the cable from the scanner, being careful not to pull on the wires just the plug (circled in yellow.)
3. Remove the 2 screws holding the barcode scanner in (circled in red.)
4. Slide the barcode scanner out.
5. Slide the new Barcode scanner into place, install both mounting screws and plug the scanner back in. The kiosk is now ready to be powered back on.

**Be sure to return your defective scanner back to
Big Daddy Games.**



Geni D Barcode Scanner