

POWER PLAYER 3

OPERATIONS MANUAL



Big Daddy Games LLC

733 Midway Road
Menasha, WI 54952

TEL: (920) 727-5508

www.bigdaddygames.net
sales@bigdaddygames.net

TECH-DIRECT

(920) 850-7409

Calibrating & Screen Settings

1. Press the Menu Switch (Gray Wire) **one time** to open up the Password screen.
2. Press the Menu Switch (Gray Wire) **4 times** to open up the Screen Resolution Setting.
3. In Screen Setting, press Operator Switch #2 (white wire) **4 times** for Screen Calibration.
4. After Calibration, set Screen Resolution 16x9. Press YES for text display on Bottom Monitor
5. Press APPLY for reboot.

Note that PP3 with 28" GOLDFINGER Monitors DO NOT have MONITOR CALIBRATION option available and are SELF-AUTO CALIBRATED.

Users and Passwords

Game setup is password-protected which varies from levels of User access and permissions. All setup features and options are available to the ADMIN only. The fewest options and most restrictive use are available to the ATTENDANT.

User Level	Password	Recommended Access
ADMIN	000000	Operator Owner
OPERATOR	0000	Operator Management / Staff
LOCATION	2222	Location Owner / Management
ATTENDANT	1111	Location Staff

Questions or Problems? **Call TECH DIRECT (920) 850-7409**

Contents

25-Liner Game Interface	1
User Login	2
Main Cabinet Settings Menu	3
Network Settings.....	4
Progressive	4
• Enable/Disable Progressive	4
• Edit or View Progressive Server IP Address	4
• Edit Progressive Game Name Display	4
• Edit Progressive Prize to Meters	4
• Progressive Connection Status.....	4
Setting up Progressive Server	5
Global Settings	6
Audio	6
• Edit Audio Settings	6
Display	6
• Credit Display (Credits / Dollars)	6
• Reel Difficulty settings.....	6
• Attendant Clear	6
• Maximum Single Spin Win Amount	6
• Maximum Machine Cabinet Credits.....	6
• Cents Redeemed Enabled / Disabled	6
• Clear Cents Remaining Enabled / Disabled	6
• Minimum Feature Bet Amount	6
• Maximum Player Bet Amount	6
Monitor	6
• Change Resolution Display	6
Printer/BV.....	7

• Enable/Disable Printer	7
• Printer Type Installed (Default: Pyramid).....	7
• Printer Port (Default: COM5).....	7
• Maximum Ticket Out Enabled / Disabled	7
• Maximum Ticket Out Value.....	7
Jackpot.....	7
• Minimum Jackpot Bet	7
• Jackpot Level Settings 1 – 4.....	7
Reveal Standard or Mandatory Preview	7
• Player Bet Denomination Enable / Disable	7
Cabinet Info.....	8
View Software Platform Version	8
Edit Cabinet ID.....	8
Edit Cabinet Location Name.....	8
Edit Date / Time.....	8
View License Key Installed	8
Bookkeeping.....	9
View Master and Individual Game Books	9
CLEAR PERIOD / MASTER BOOKS	9
Meters	9
Role Manager	10
Change each User’s passwords	10
Game Settings	11
Enable / Disable Games.....	11
Edit Individual Game Volume.....	11
Edit Individual Game Reel Settings	11
Save Data	11
Game History	12
Review Player History Spins	12

Review Player History Features Won	12
Review Player History Jackpots Won	12
Review Player History Collect History	12
Review Player History Refunds History	12
Review Player History Progressive Prizes Won	12
Review Bill Log Inserted	12
TROUBLESHOOTING.....	13
Progressive Jackpot is not ticking up	13
Progressive is running slow	13
Don't remember personalized login password.....	13
Calibrating & Screen Settings*	13
QUIXANT 6000 Motherboard Wire Harness Diagram	14
J2 Wire Harness.....	14
J3 Wire Harness.....	14
J4 Wire Harness.....	15
J5 Wire Harness.....	15
Power Player 3 Version 14 and Newer	16
BV50 Serial Harness Installation	16
Convert BV50 from PULSE to SERIAL Mode	16
Convert PP3 Operator Menu BV50 from PULSE to SERIAL	16
Power Player 3 Version 20 and Newer	17
ICT PA7 Serial Harness Installation.....	17
Convert PP3 Operator Menu ICT PA7 from PULSE to SERIAL	17
NV9 Serial Harness Installation	17
Convert PP3 Operator Menu NV9 from PULSE to SERIAL.....	17


25-Liner Game Interface



1. Player Help Menu
2. Player Credits (Credits)
3. Exit to Main Lobby Screen
4. Player Bet Amount (Can be adjusted with + or -)
5. Max Play Player Bet Amount (Can be restricted per Game Settings "Reveal" Settings)
6. Reveal the next Player's Spin (Optional per Cabinet "Reveal Mode Enabled" Settings)
7. Player Start/Spin Reel
8. Spin Win Amount
9. Current Random Jackpot Values
10. Win Pay Lines

Power Player 3 Operations Manual

User Login

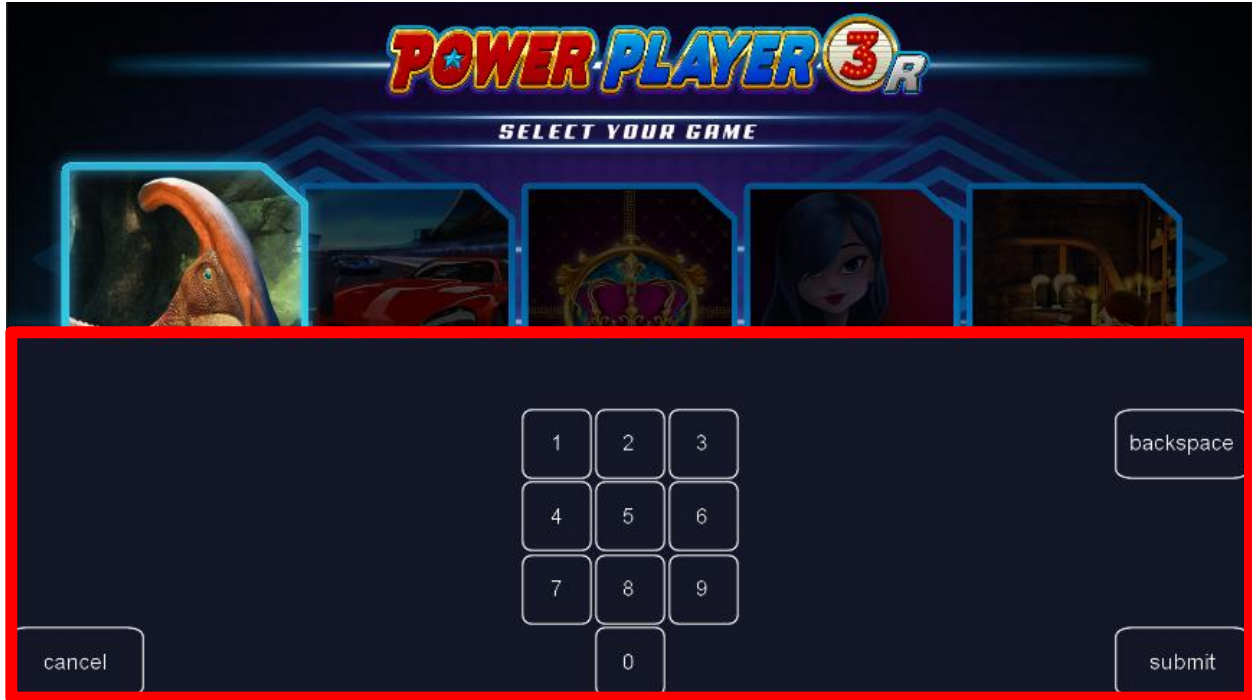

Game setup is password-protected which varies from levels of User access and permissions. All setup features and options are available to the ADMIN only. The fewest options and most restrictive use are available to the ATTENDANT.

USER LOG-IN, hit the **Operator Switch** to pop-up the PIN Prompt.

User Level	Password	Recommended Access
ADMIN	000000	Operator Owner
OPERATOR	0000	Operator Management / Staff
LOCATION	2222	Location Owner / Management
ATTENDANT	1111	Location Staff

Power Player 3 Operations Manual

Main Cabinet Settings Menu


Options available for each Users (ADMIN shown, reference User Login for user access restrictions).



1. Reset Icon to restart the Game
2. Shut Down Icon to shut down the Game

PERMISSION LEVELS		
ATTENDANT / LOCATION <i>(ATD / LOC)</i>	OPERATOR <i>(OP)</i>	ADMIN <i>(ADMIN)</i>
View Cabinet Info	Plus ATD, LOC	Plus ATD, LOC, OP
View Game Reel History	Edit Cabinet Info	Edit <i>OP</i> Password
View Game Jackpot History	Edit <i>ATD</i> Password	Edit <i>ADMIN</i> Password
Edit Game Reel Speeds	Edit <i>LOC</i> Password	Edit Books Meters
Edit Game Volume	Edit Game Difficulty Settings	Reset Master Books
Edit Attract Mode Setting	Edit Progressive Settings	Reset Game History
View/Print Books	Edit Jackpot Settings	
Re-Print Prize Tickets	Edit Printer Settings	
	Reset Period Books	
	Edit Display Settings (Dollars, Cents, Credits, etc.)	

Network Settings

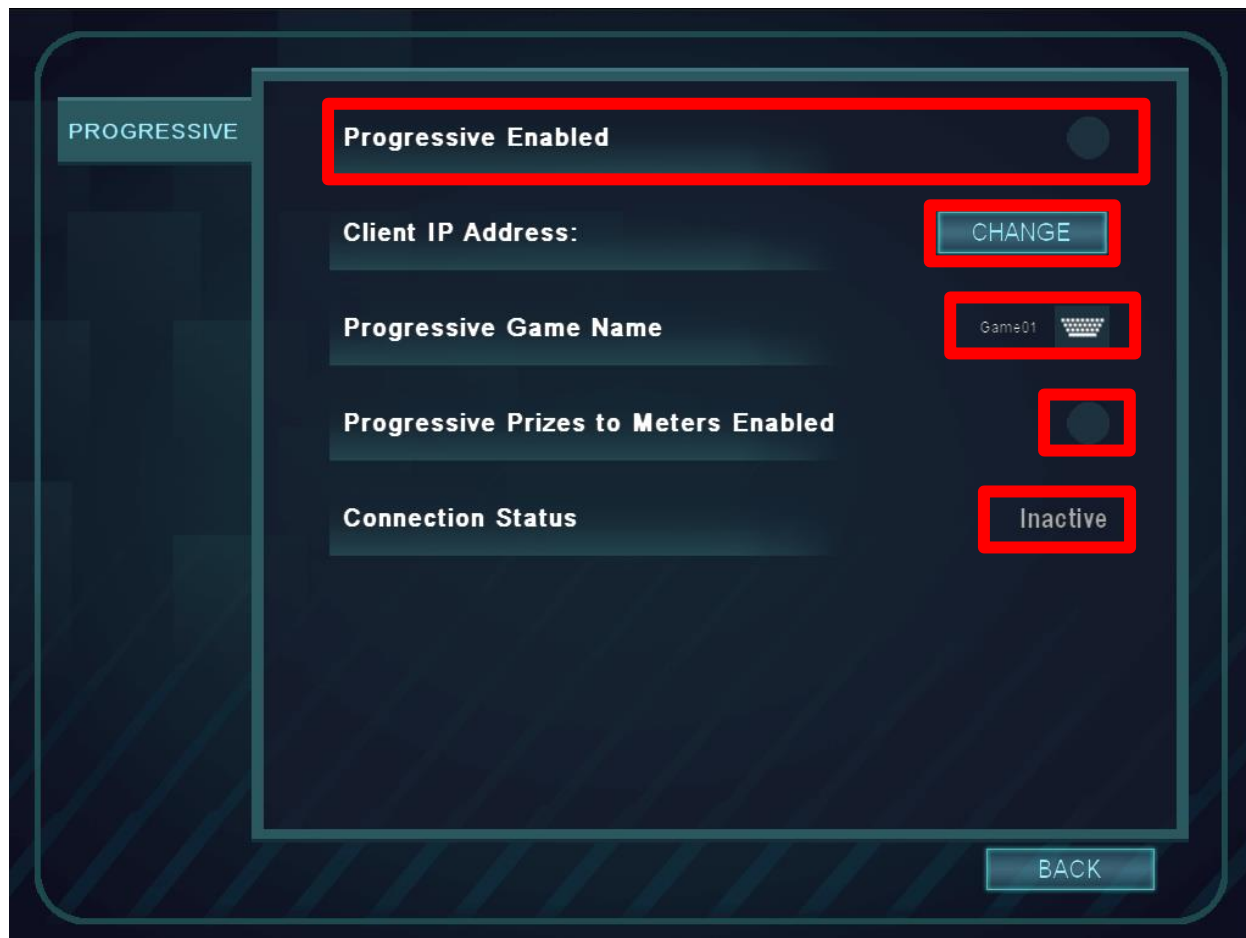

Progressive

- Enable/Disable Progressive
- Edit or View Progressive Server IP Address
 - Default: "10.4.2."
- Edit Progressive Game Name Display
- Edit Progressive Prize to Meters
 - Tracks progressive prize ticket dollar value to be added to the hard meter out values
- Progressive Connection Status


***Note that when REVEAL is TURNED ON, the PROGRESSIVE WILL TURN OFF. To keep PROGRESSIVE ON, REVEAL OPTION must be OFF!**

Power Player 3 Operations Manual

Setting up Progressive Server

ADMIN is the only user login who can setup Progressive for the Power Player 3.

1. Logged in as ADMIN, press the **Network Settings**. Setup screen should appear as below.

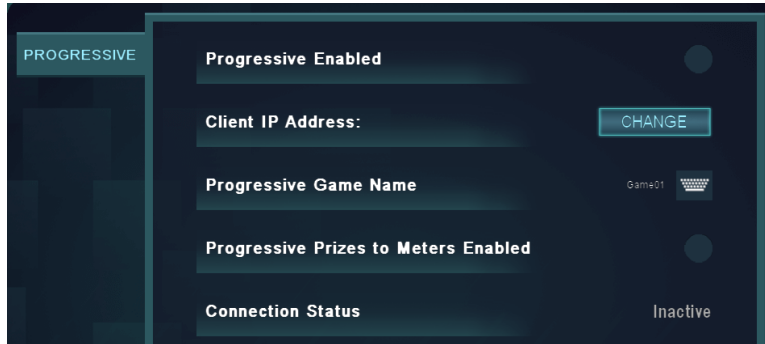

2. **CHANGE** the **Client IP Address**. Netmask does not need to be edited (255.255.0.0).

- a. PLEASE WAIT **30 SECONDS** FOR THE IP ADDRESS TO BE ADDED



3. **Progressive Game Name** should match IP Address

- i. Game 1 = Game **01**
- ii. Game 2 = Game **02**
- iii. Game 3 = Game **03**

4. *Optional Progressive Prize Tickets* to enable Progressive Prizes to tick Hard Meter Out.
5. Press **Progressive Enabled** when **Client IP Address** and **Progressive Game Name** entries are completed.
6. Connection Status should update to **CONNECTED**.

Progressive Setup is **COMPLETED**.

7. If Connection Status **is not** CONNECTED, swap the CAT5 cable to the second ethernet port and reboot. If necessary, repeat steps 1-6 again.

Global Settings



Audio

- Edit Audio Settings

Display

- Credit Display (Credits / Dollars)
- Reel Difficulty settings

Reel Set	1	2	3	4	5	6	7
\$1.75 Avg. Play	93.6%	92.3%	91.2%	89.3%	88.0%	86.9%	84.4%

- Attendant Clear
- Maximum Single Spin Win Amount
- Maximum Machine Cabinet Credits
- Cents Redeemed Enabled / Disabled
- Clear Cents Remaining Enabled / Disabled
- Minimum Feature Bet Amount
- Maximum Player Bet Amount

Monitor

- Change Resolution Display

Power Player 3 Operations Manual

Printer/BV

- Enable/Disable Printer
- Printer Type Installed (**Default: Pyramid**)
- Printer Port (**Default: COM5**)
- Maximum Ticket Out Enabled / Disabled
- Maximum Ticket Out Value
- Refund Ticket Enabled
- Serial BV Enabled
- Serial BV Type (**Default: BV50**)
- Serial BV Port Number (**Default: COM6**)

Jackpot

- Minimum Jackpot Bet
- Jackpot Level Settings 1 – 4

Level	1	2	3	4
Mini	5 – 20	10 – 40	20 – 80	20 – 15000
Minor	25 – 100	50 – 200	100 – 500	100 – 15000
Major	125 – 250	250 – 500	500 – 1125	500 – 15000
Big Daddy	250 – 500	500 – 1000	1000 – 2000	1000 – 15000

***Level 4 Jackpot has customizable set Max Limits**



Reveal Standard or Mandatory Preview

- Reveal Mode **STANDARD** or **MANDATORY PREVIEW** Enable/Disable
NOTE: PROGRESSIVE will be DISABLED if REVEAL setting is ON
- Player Bet Denomination Enable / Disable



Cabinet Info

View Software Platform Version

- Platform Version is the Game's version number

Edit Cabinet ID

- Editable field that prints on Tickets and Books Cabinet info

Edit Cabinet Location Name

- Editable field that prints on Tickets and Books Location info

Edit Date / Time

- Editable field that prints on Tickets and Books Date/Time info

View License Key Installed

- Non-editable field that states current BDG License Key installed and prints on Tickets and Books Key info

Bookkeeping



View Master and Individual Game Books

CLEAR PERIOD / MASTER BOOKS


- In the **ALL** tab, you can use the scroll bar on the right to scroll down to Clear Books Period.
- Note that only ADMIN has access to Clear Master Books.

Meters

ADMIN ACCESS only

- Enter in starting Cabinet Hard Meters and reconcile with physical hard meters.

Role Manager

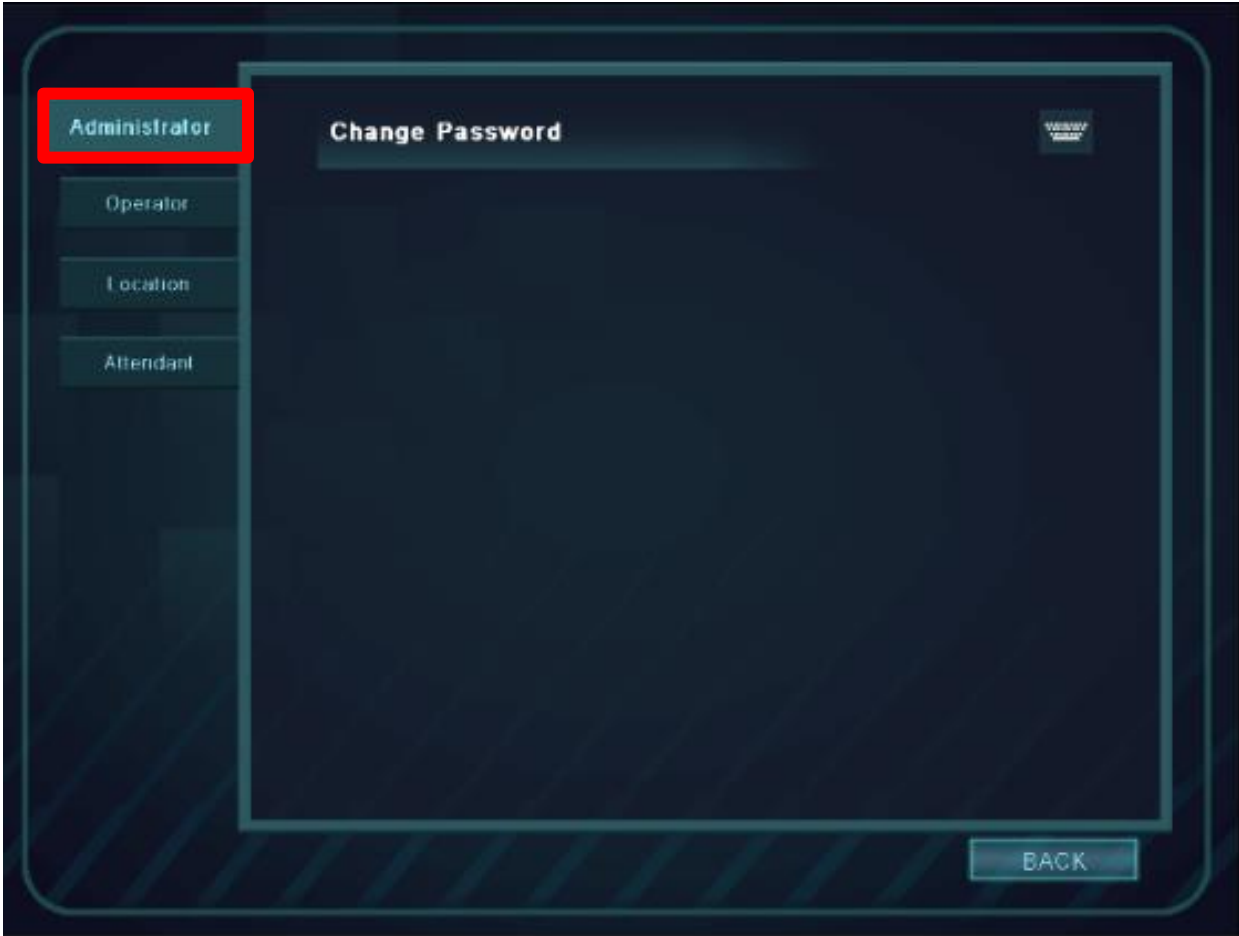

Change each User's passwords

Game Settings



Enable / Disable Games


- Enable / Disable up to 10 out of the 18 Games available
 1. Spooky 2
 2. Buffalo
 3. Spooky 2 Reburied
 4. Reel Racing
 5. VolKeno
 6. Dinosaur
 7. Crown Jewels
 8. Starz N Barz
 9. Bier Frau
 10. Midway
 11. Underground Poker
 12. Deuces Wild
 13. Pirate Joker
 14. Pirate Jacks or Better
 15. Spooky Cash
 16. Zombie-U
 17. Tostada
 18. Robot Bob

Edit Individual Game Volume

Edit Individual Game Reel Settings

Save Data

ADMIN ACCESS only

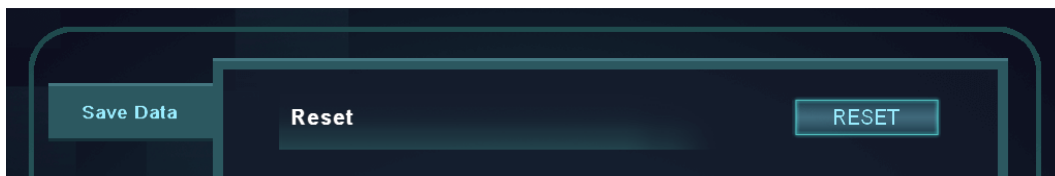

- Resets Software settings to DEFAULT **AND** ZEROES out ALL BOOKS, GAME HISTORY entirely.

Game History



Review Player History Spins

- History of up to 100 of the latest Player spin results

Review Player History Features Won

- History of up to 25 of the latest Feature dollar amount and Feature spin result won

Review Player History Jackpots Won

- History of up to 25 of the latest Random Jackpots Won

Review Player History Collect History

- History of up to 10 of the latest Ticket Redemption amounts

Review Player History Refunds History

- History of up to 10 of the latest Refunded tickets

Review Player History Progressive Prizes Won

- History of up to 10 of the latest Progressive Prize Tickets won

Review Bill Log Inserted

- History of up to 1,100 of the latest Bill denominations inserted into the BV

Power Player 3 Operations Manual

TROUBLESHOOTING

Progressive Jackpot is not ticking up

1. Ensure that CAT5 ethernet cable is installed to the Quixant LAN Port 1.
2. Ensure that the REVEAL Option is turned OFF.
3. Ensure that the IP Address are correctly entered.
4. Ensure that the GAME IP Address are not duplicated.
5. Reboot the Progressive Server and GAME cabinet.

Progressive is running slow

1. Ensure the Progressive Yellow-Dot Motherboard is running at least 4GB of RAM.
2. Ensure connected switch is a Gigabit switch (call TECH-DIRECT for FREE replacement)
3. Reboot the Progressive.

Don't remember personalized login password

1. Below are the default passwords for each login.

User Level	Password	Recommended Access
ADMIN	000000	Operator Owner
OPERATOR	0000	Operator Management / Staff
LOCATION	2222	Location Owner / Management
ATTENDANT	1111	Location Staff

2. Big Daddy Games is unable to recover and personalized password so a new Software replacement will be needed.

Calibrating & Screen Settings*

1. Press the Menu Switch (Gray Wire) **one time** to open up the Password screen.
2. Press the Menu Switch (Gray Wire) **4 times** to open up the Screen Resolution Setting.
3. In Screen Setting, press Operator Switch #2 (white wire) **4 times** for Screen Calibration.
4. After Calibration, set Screen Resolution 16x9. Press YES for text display on Bottom Monitor
5. Press APPLY for reboot.

***Note that PP3 with 28" GOLDFINGER Monitors DO NOT have MONITOR CALIBRATION option available and are SELF-AUTO CALIBRATED.**

QUIXANT 6000 Motherboard Wire Harness Diagram

J2 Wire Harness

TOP				BOTTOM	
---	NOT USED	18	9	NOT USED	---
---	NOT USED	17	8	NOT USED	---
---	NOT USED	16	7	NOT USED	---
BROWN	INTLK GROUND	15	6	INTERLOCK 5	BLACK
WHITE	INTLK GROUND	14	5	INTERLOCK 4	GREY
PURPLE	INTLK GROUND	13	4	INTERLOCK 3	BLUE
GREEN	NOT USED	12	3	INTERLOCK 2	YELLOW
ORANGE	INTLK GROUND	11	2	NOT USED	---
---	NOT USED	10	1	NOT USED	---

J3 Wire Harness

TOP				BOTTOM	
WHITE	TICKETSWGRND	20	10	BA/KO GROUND	GREY W/ BLUE
PURPLE	BOOKS	19	9	MENU SWITCH	BLUE
ORANGE W/ BLUE	DIN19	18	8	DIN18	YELLOW W/ BLK
---	NOT USED	17	7	KNOCKOFF	RED W/ BLUE
BROWN	BA PULSE	16	6	PLAY SWITCH	BLACK
---	NOT USED	15	5	NOT USED	---
---	NOT USED	14	4	NOT USED	---
---	NOT USED	13	3	TICKET SWITCH	YELLOW
---	NOT USED	12	2	NOT USED	---
BROWN W/ BLACK	PLAYSWGRND	11	1	RESE TMENUGRD	BLACK W/ BLUE

Power Player 3 Operations Manual

J4 Wire Harness

TOP				Bottom	
---	NOT USED	24	12	NOT USED	---
---	NOT USED	23	11	NOT USED	---
---	NOT USED	22	10	NOT USED	---
---	NOT USED	21	9	NOT USED	---
WHITE	BA PULSE	20	8	NOT USED	---
---	NOT USED	19	7	NOT USED	---
ORANGE	BA GROUND	18	6	NOT USED	---
---	NOT USED	17	5	NOT USED	---
---	NOT USED	16	4	NOT USED	---
---	NOT USED	15	3	NOT USED	---
---	NOT USED	14	2	NOT USED	---
---	NOT USED	13	1	NOT USED	---

J5 Wire Harness

TOP				Bottom	
---	NOT USED	24	12	NOT USED	---
---	NOT USED	23	11	NOT USED	---
---	NOT USED	22	10	NOT USED	---
---	NOT USED	21	9	NOT USED	---
GREEN W/ WHITE	NOT USED	20	8	DOUT22	RED W/ WHITE
BLACK W/ GREY	DOUT21	19	7	DOUT20	GREY W/ WHITE
---	NOT USED	18	6	NOT USED	---
---	NOT USED	17	5	PLAY LAMP	GREY
---	NOT USED	16	4	NOT USED	---
GREEN	NOT USED	15	3	NOT USED	---
ORANGE	METER IN	14	2	TICKET LAMP	RED
BROWN	METER OUT	13	1	NOT USED	---

Power Player 3 Operations Manual

Power Player 3 Version 14 and Newer

BV50 Serial Harness Installation


1. Connect the serial end of BV50 harness into COM6 of Motherboard
2. The 4-pin Molex connects to the 12v and ground from the power supply
3. The 2-pin Molex connects to a modified AC power pack for 5v

Convert BV50 from PULSE to SERIAL Mode

1. On the BV50, open up the unit by pulling the silver latches on the sides
2. Locate the brown push button switch on the circuit board
3. Press and hold for a fast 8 count then close the unit back up, you should hear the BV power cycle and there should be no lights on the front when powered on and in SERIAL mode

Convert PP3 Operator Menu BV50 from PULSE to SERIAL

1. Press Operator menu button. Password is "0 0 0 0 0 0"
2. Go to the Global settings then press Printer/BV on the left
3. Scroll down and Enable Serial BV *ON*
4. Change Serial BV Type to **BV50**
5. Change Serial BV Port Number to **COM6**

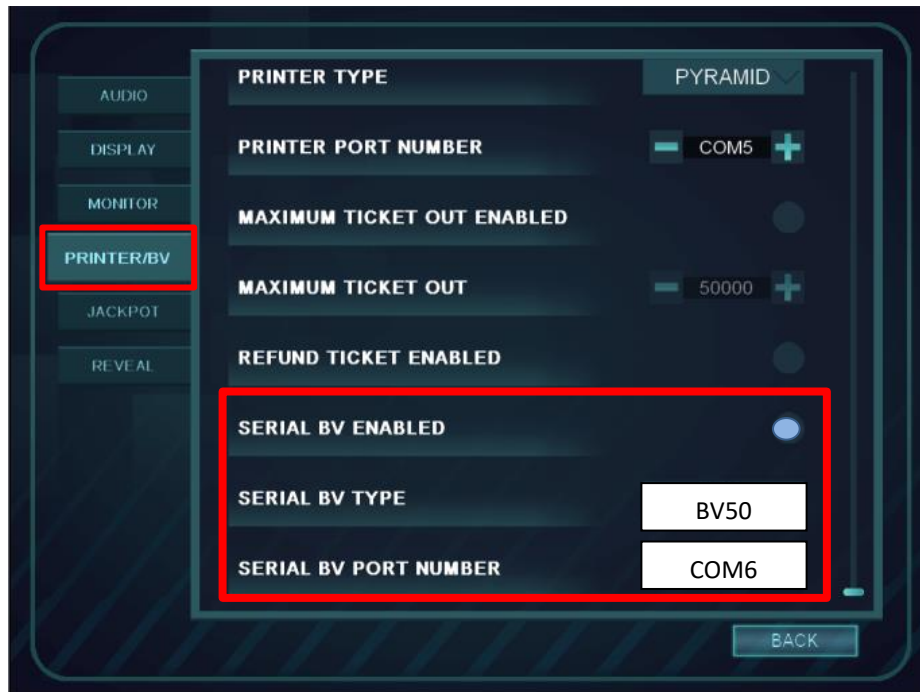

6. Exit settings
7. If BV50 lights are
 - a. ON – ready to test
 - b. OFF – reboot the cabinet

Power Player 3 Operations Manual

Power Player 3 Version 20 and Newer

ICT PA7 Serial Harness Installation

1. Connect the serial end of the ICT PA7 harness into COM6 of Motherboard
2. Connect the ICT PA7 power harness to the open Cabinet BA power plug.

Convert PP3 Operator Menu ICT PA7 from PULSE to SERIAL


1. Press Operator menu button. Password is "0 0 0 0 0 0"
2. Go to the Global settings then press Printer/BV on the left
3. Scroll down and Enable Serial BV *ON*
4. Change Serial BV Type to **ICT PA7**
5. Change Serial BV Port Number to **COM6**
6. Exit settings
7. If BV50 lights are
 - a. ON – ready to test
 - b. OFF – reboot the cabinet

NV9 Serial Harness Installation

1. Connect the serial end of the NV9 IF17 harness into the IF-17 Peripheral port.
2. Connect the NV9 power plug harness into the cabinet BA Power plug.
3. Connect the USB AB end to the IF17 Host Machine port and USB plugged into an open USB port of the Motherboard.

Convert PP3 Operator Menu NV9 from PULSE to SERIAL

1. Press Operator menu button. Password is "0 0 0 0 0 0"
2. Go to the Global settings then press Printer/BV on the left
3. Scroll down and Enable Serial BV *ON*
4. Change Serial BV Type to **NV9**
5. Change Serial BV Port Number to **COM13**

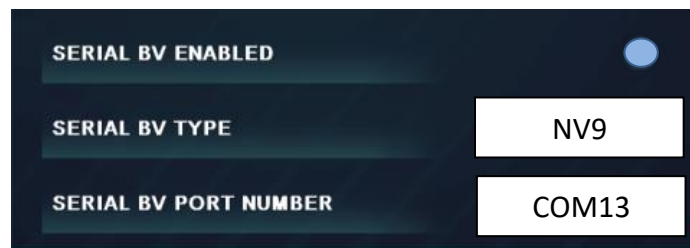

6. Exit settings
7. If BV50 lights are
 - a. ON – ready to test
 - b. OFF – reboot the cabinet

Converting Power Player 2 or HOT GAMES to Power Player 3

There will be a few adjustments that will need to be made when converting Power Player 2 OR HOT GAMES to Power Player 3.

Printer

- The Power Player 2 and HOT GAMES printers are currently set to Serial POG Protocol. The Printer must be set to Serial ESC POS Protocol for Power Player 3 to be able to print.
- The dip switches must be set to the following settings;
 - ON: 1, 3
 - OFF: 2, 4

J4 Plug

The J4 Plug (Orange and White) must be plugged into the side of the Quixant 6000 Motherboard input labeled J4.

Bill Acceptor

From the J4 Plug, the 3-pin Molex connector must be connected to the 2 yellow wires coming from the Bill Acceptor.

Questions or Problems? **Call TECH DIRECT (920) 850-7409**

Calibrating & Screen Settings

1. Press the Menu Switch (Gray Wire) **one time** to open up the Password screen.
2. Press the Menu Switch (Gray Wire) **4 times** to open up the Screen Resolution Setting.
3. In Screen Setting, press Operator Switch #2 (white wire) **4 times** for Screen Calibration.
4. After Calibration, set Screen Resolution 16x9. Press YES for text display on Bottom Monitor
5. Press APPLY for reboot.

Note that PP3 with 28" GOLDFINGER Monitors DO NOT have MONITOR CALIBRATION option available and are SELF-AUTO CALIBRATED.

Users and Passwords

Game setup is password-protected which varies from levels of User access and permissions. All setup features and options are available to the ADMIN only. The fewest options and most restrictive use are available to the ATTENDANT.

User Level	Password	Recommended Access
ADMIN	0 0 0 0 0 0	Operator Owner
OPERATOR	0 0 0 0	Operator Management / Staff
LOCATION	2 2 2 2	Location Owner / Management
ATTENDANT	1 1 1 1	Location Staff

Questions or Problems? **Call TECH DIRECT (920) 850-7409**

Visit us at www.bigdaddygames.net for the latest and newest GAMES available for your Market!

OPERATORS LOG-IN TODAY for the latest Service Bulletin News and Software Updates!



TECH - DIRECT

920.850.7409

After Hours of Support Service Calls:

MONDAY - THURSDAY Close of business **4:15PM - 8PM**
FRIDAY Close of business **3PM - 8PM**
SATURDAY **10AM - 6PM**
SUNDAY **Noon - 4PM**

Except Holidays

Service Support during business hours
(920) 727-5508 ext. 176 OR (920) 850-7409

733 Midway Rd. Menasha, WI 54952
bigdaddygames.net

Big Daddy Games LLC



Big Daddy Games LLC
733 Midway Road
Menasha, WI 54952

TEL: (920) 727-5508

www.bigdaddygames.net
sales@bigdaddygames.net

CALL FOR SERVICE NOW!

TECH-DIRECT

(920) 850-7409

After Hours of Support Service Calls

Monday – Thursday	4:15 PM	-	8 PM
Friday	3 PM	-	8 PM
Saturday	10 AM	-	6 PM
Sunday	Noon	-	4 PM