


Open the vault door and remove the two green screws that secure the sliding tray in place



With the vault slid out – remove the 4 screws that hold the mid-rail in place (both sides)
Then push the mid-rails back into the vault

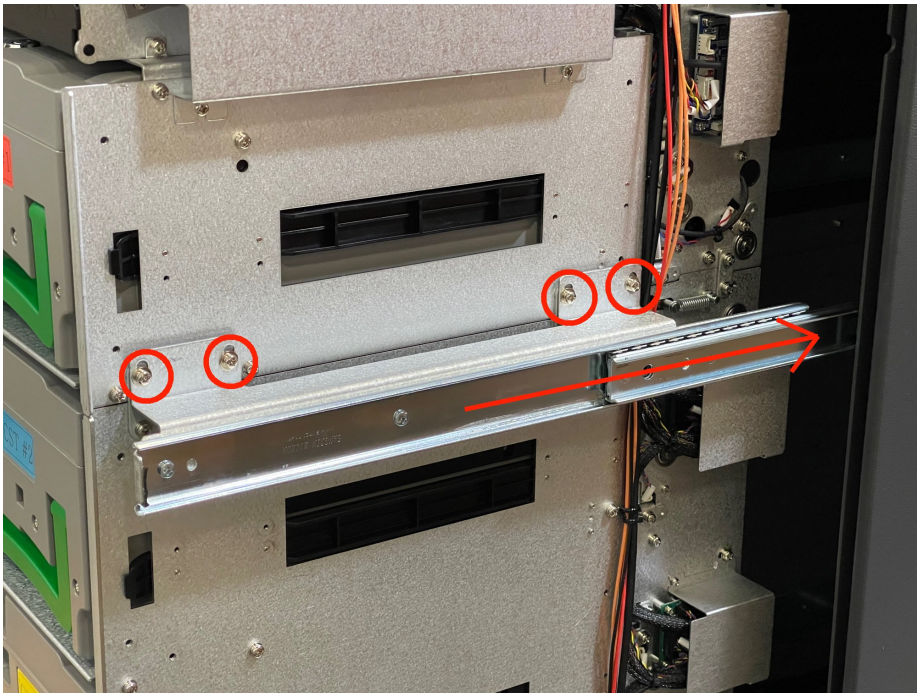


This shows the rail moved back into the vault – do this to both sides of the dispenser



Now remove the 3 screws per side that hold the dispenser to the sliding tray



Unplug the power and data cables from the dispenser

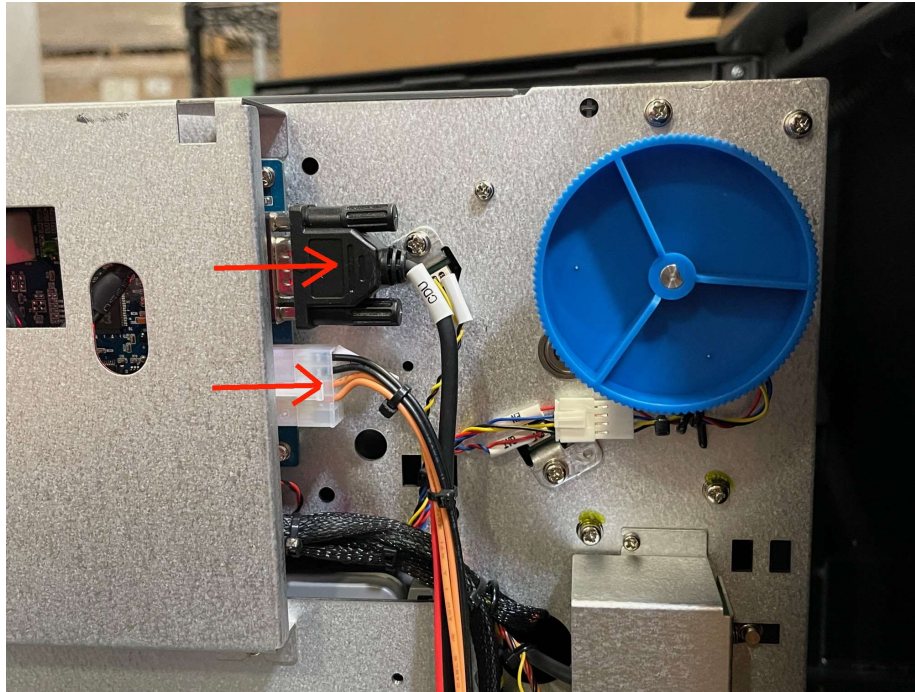

Remove the cable tie so that the cables can be separated from the dispenser



With the screws removed and the cables disconnected – carefully lift the dispenser off the sliding tray and place it on a flat surface. Now you can have better access to the bottom of the vault.

Reinstall the dispenser by doing the above in reverse when ready.